
PILOT-OPERATED CHECK VALVE FOR BALANCING VALVE (HK2M)

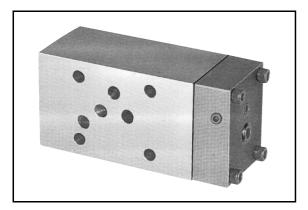


This valve is used to prevent the balancing cylinder in the balancing circuit that uses the HY-TEGRA manifold mount-type balancing valve from falling, thereby protecting the servomotor and the ball screw.

- HK2M-GY+G(E)-**(B) is used together with HGR2M-BG*-**(B).
- To use HK2M-GY+G(E)-**(B), plug B port of the manifold or the subplate.
- HK2M-GY+G(E)D-**(B) is used together with HGR2M-BG*D-**(B).
- The mounting bolts necessary for using the valve together with HGR2M-BG*D-**(B) are supplied with the valve (M5 × 115 for size 025B, M8 × 120 for size 03).

SPECIFICATIONS


	Drain Type	Model	Max. Operating Pressure (MPa)	Rated Flow (L/min)	Max. Flow (L/min)	Cracking Pressure of Check Valve (MPa)	Symbol
Internal pilot	Internal drain	HK2M-GY*G-025B	14	20	40	* symbol 1: 0.04 2: 0.35 3: 0.46 4: 0.53	IN R. DR. OUT. IN R. OUT. (P) (RI) (B) (A)
		HK2M-GY*G-03		40	80		
	External drain	HK2M-GY*GD-025B		20	40		IN DR DR OUT IN DR DR OUT (P) (R) (B) (A)
		HK2M-GY*GD-03		40	80		
External pilot	Internal drain	HK2M-GY*GE-025B		20	40		IN R OUT
		HK2M-GY*GE-03		40	80		
	External drain	HK2M-GY*GED-025B		20	40		IN R. DR. OUT. IN R. DR. OUT. IN R. DR. OUT. (P) (R) (B) (A)
		HK2M-GY*GED-03		40	80		

• Example of Use with Balancing Valve (Balancing Valve + Pilot-operated Check Valve)

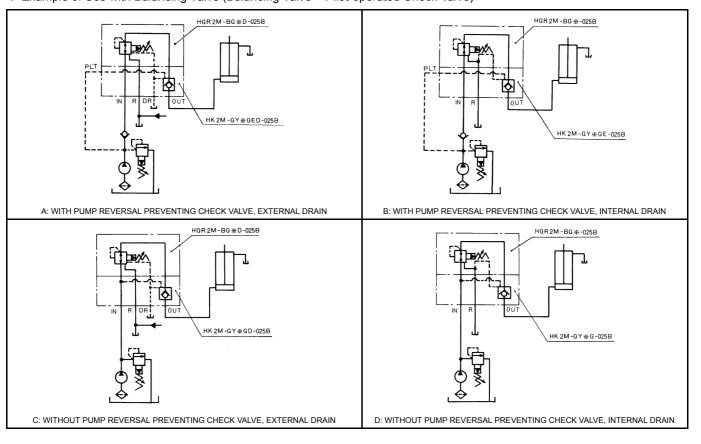

EXTERNAL DIMENSIONS

• Size 025

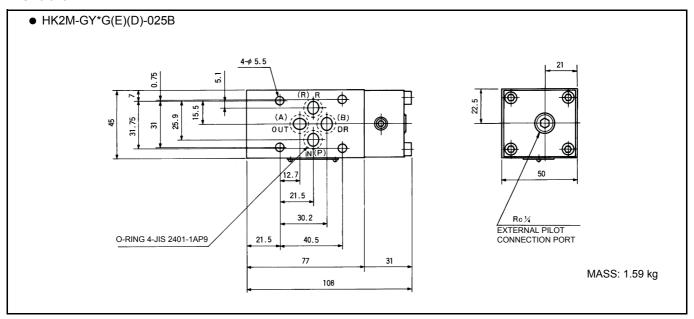

• Size 03

